

Gameboy Advance SP

Be sure to turn off the gameboy before removing the camera

When taking photos with this gameboy, either your camera or image in the window will be upside down. To flip the image over: in shoot mode, hit "select," use the cross-shaped button to go to "flip" mode. Use the cross-shaped button to go to "flip vertical." Hit "A."

